

# IMPORTANT

The enclosed flywheel to pressure plate dowel pins are to be used as follows:


For O.E. 11.5" clutch assemblies, use the TWO enclosed straight sided pins in their corresponding flywheel locations.

For Centerforce 11" clutch assemblies, do NOT use the dowel pins. Use the Pressure Plate bolts supplied with the clutch set.

For Centerforce 12" clutch assemblies, use the THREE enclosed stepped dowel pins in their corresponding flywheel locations.

(Note: the large end of the pin is a press fit into the flywheel)

 USE 3 STEPPED DOWEL PINS WITH **12 INCH** CLUTCH ASSEMBLY

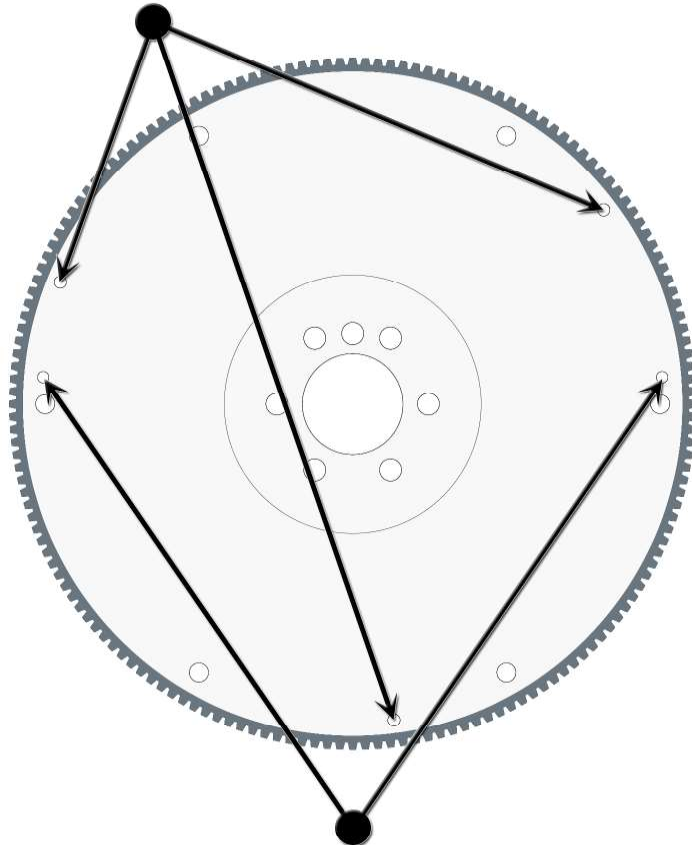

 USE 2 STRAIGHT DOWEL PINS WITH **O.E. 11.5 INCH** CLUTCH ASSEMBLY



**"NOTE"** Centerforce tip sheets are for general reference only. Please refer to your owners manual for vehicle specifications.

## IMPORTANT